

Stealth Pivot NL - Quickstart guide


STEALTHPIVOT NL SET

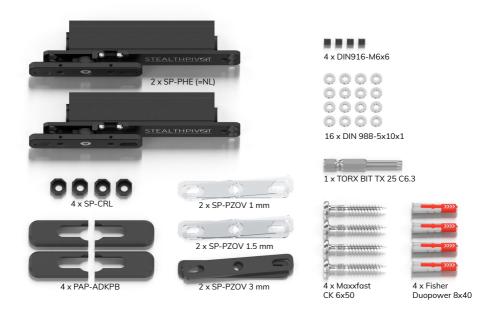

OPTIONAL STEALTHPIVOT NL ACCESSORY SET

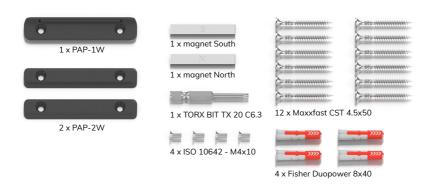


OPTIONAL STEALTHPIVOT INSTALLATION TOOLS

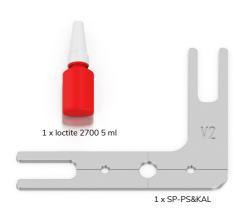






STEALTHPIVOT NL CAVITY DIMENSIONS (mm)

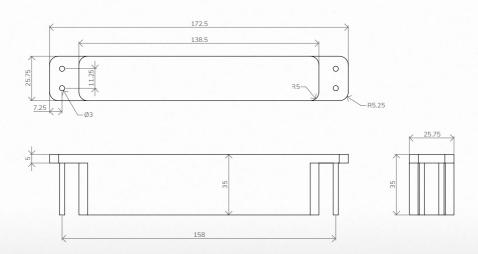




STEALTHPIVOT NL DIMENSIONS (mm)

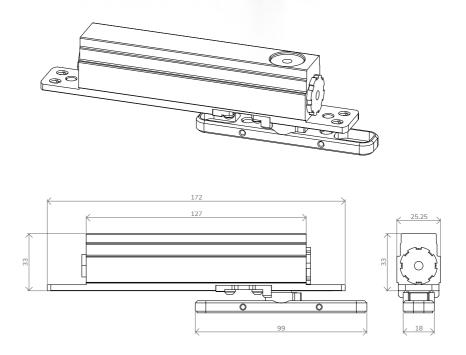

AXIS POSITIONS

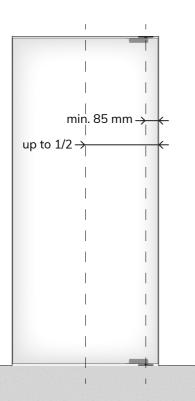


STEALTHPIVOT NL

Max. width = 1250 mm

Max. weight = 75 kg (165 lbs)

Axis: 85 mm up to 1/2

ADVISED JOINT DIMENSIONS

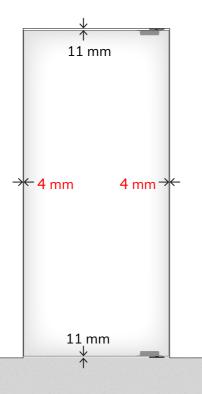


Top & bottom joints = min. 11 mm


Left & right joints:


The minimum joint depends on the door thickness and pivot distance. For visual coherence, we advise to use equal joints left and right. See visual and table below for advised left and right joint dimensions.

Y▼		A = B				
1500	I	2	2	2	2	
1000		2	2	3	3	
500	I	2	3	3	3	
250		3	3	4	4	
85	1	4	5	7	9	
X Þ		40	50	60	70	

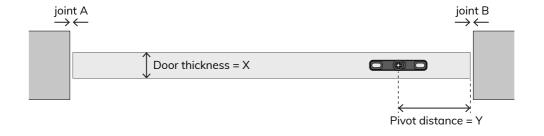

INTEGRATION OPTIONS

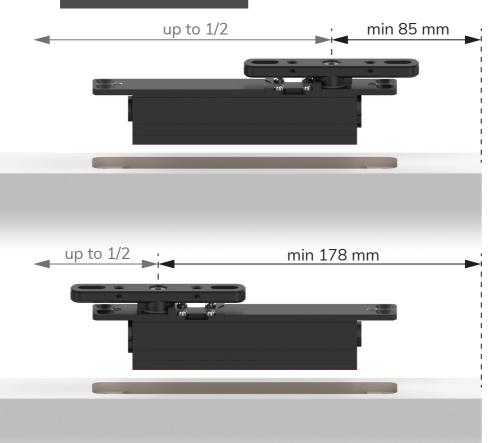

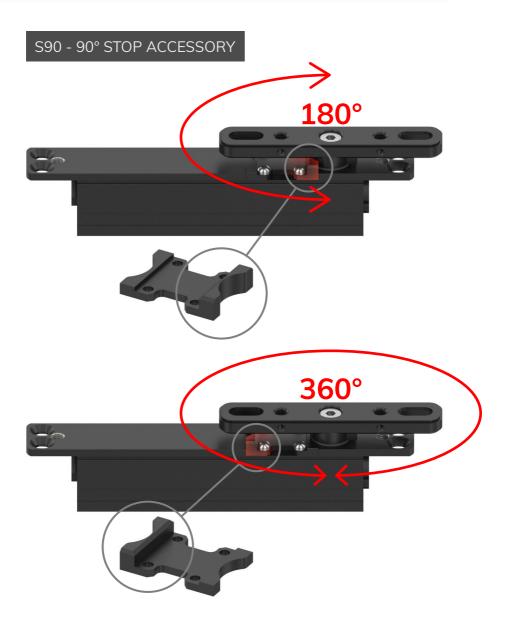

HINGE HEIGHT ADJUSTMENT OPTIONS



1. Shims between hinge and door

TOP or BOTTOM joint = preferred method for bottom hinge




TOP or BOTTOM joint = faster but less stable method



3. Inbus screws

Only for TOP joint adjustment and non compressible door structures!


DRILL PIVOT MOUNT HOLES

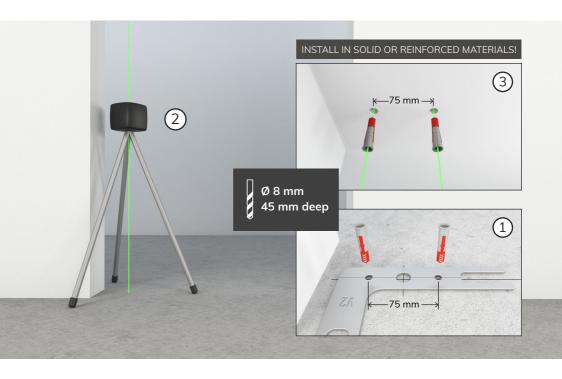

INSTALL ASSEMBLED DOOR

Place the assembled door in the doorway, with the pivot axis in between the 2 pivot mounting holes.


Then use the drill tool to rotate the pivot mount in place. Repeat for the bottom pivot mount.

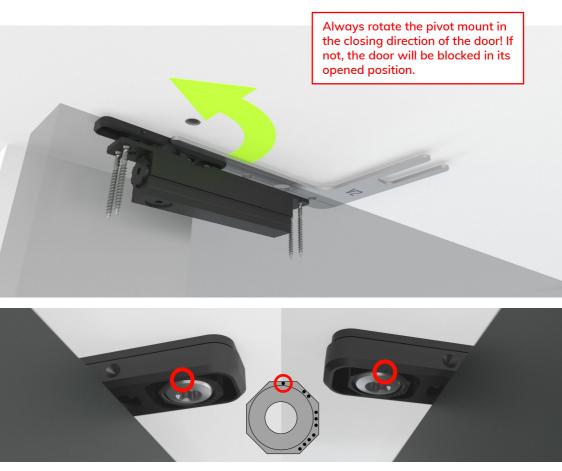


Install the octagonal inserts at 'position 1' in the top mount, then insert screws but do not fully tighten yet. Repeat for the bottom mount.

ADJUST PIVOT AXIS POSITION



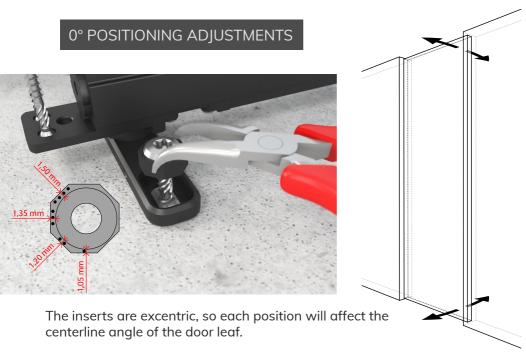

The view below shows the effect on the centerline angle when rotating the inserts to different positions.

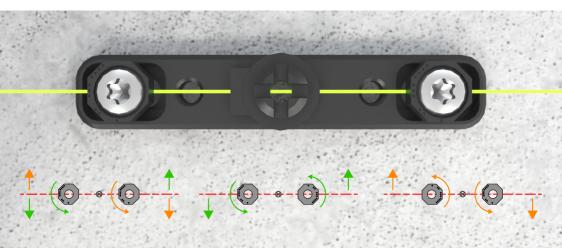

OPTIONAL 0° POSITIONING ACCESSORIES

